
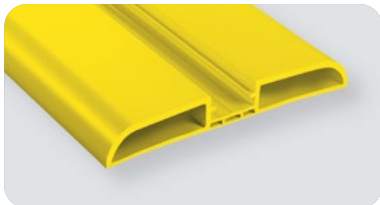



## WP 100

Length **4.000 mm**  
 Packing **8 pz / box**  
 Colour **B E F**



## WP 150


Length **4.000 mm**  
 Packing **4 pz / box**  
 Colour **B M E**



## WPC

To install with WP 100 / WP 150


Length **4.000 mm**  
 Packing **16 pz / box**  
 Colour **A B M D E F G H**



## WPT 100

To install with TM5


Packing **50 pz / box**  
 Colour **B E F**

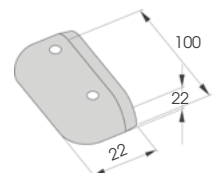

## WPA 100

To install with TS9


Packing **20 pz / box**  
 Colour **B E**

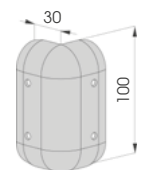

## WPT 150

To install with TM5


Packing **50 pz / box**  
 Colour **B E**

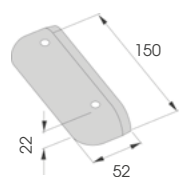



## WPA 150

To install with TS9

Packing **20 pz / box**  
 Colour **B E**


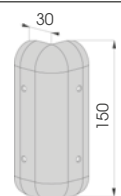


# Wall Protection

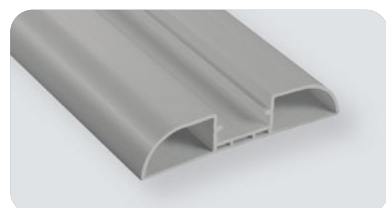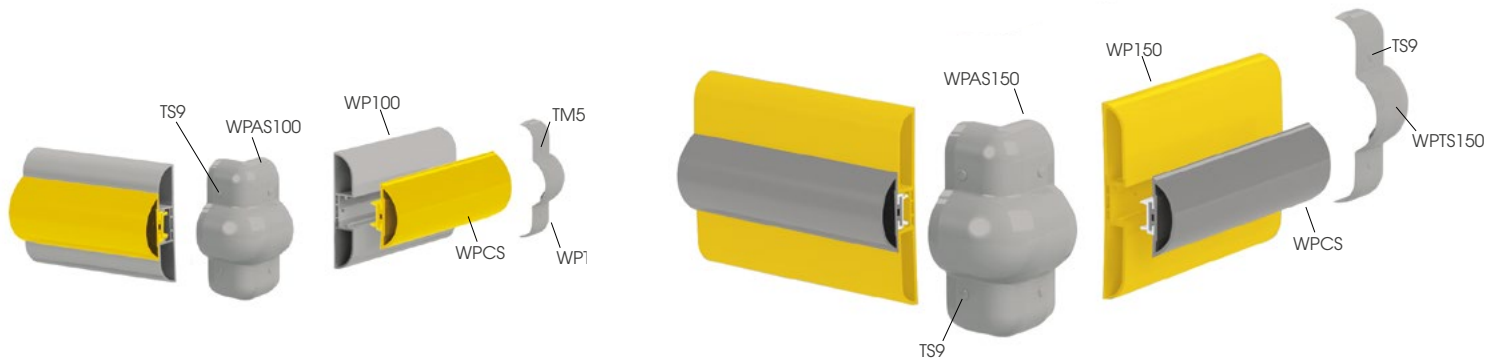


## WP 100

Length **4.000 mm**  
 Packing **8 pz / box**  
 Colour **B E F**

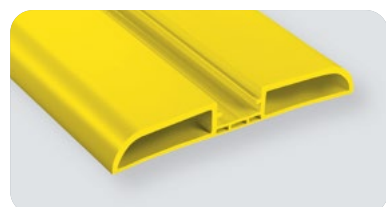

## WP 150

Length **4.000 mm**  
 Packing **4 pz / box**  
 Colour **B M E**



## WPCS

To install with WP 100 / WP 150




Length **4.000 mm**  
 Packing **8 pz / box**  
 Colour **A B M D E F G H I**



## WPTS 100

To install with TS9



Packing **20 pz / box**  
 Colour **B E**

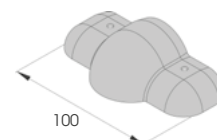

## WPAS 100

To install with TS9


Packing **20 pz / box**  
 Colour **B E**

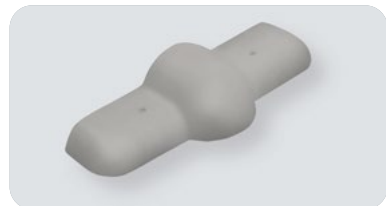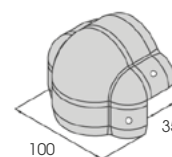

## WPTS 150

To install with TS9


Packing **20 pz / box**  
 Colour **B E**


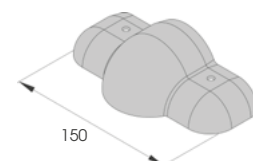


## WPAS 150

To install with TS9

Packing **20 pz / box**  
 Colour **B E**


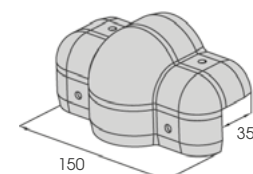


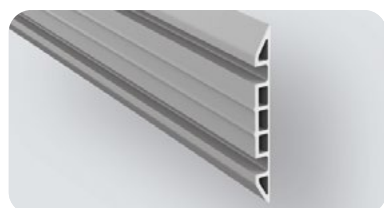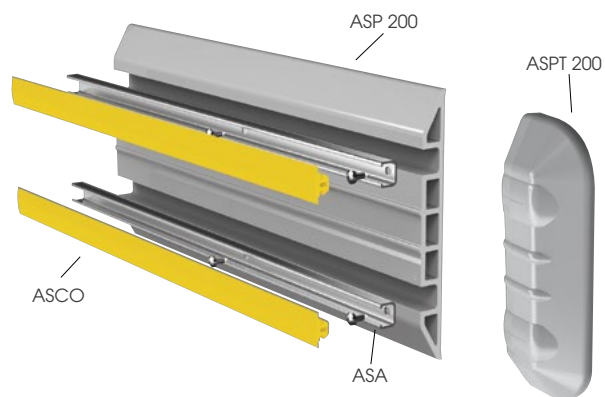

**ASP 200**





Length **4.000 mm**  
 Packing **2 pz / box**  
 Colour **B M**

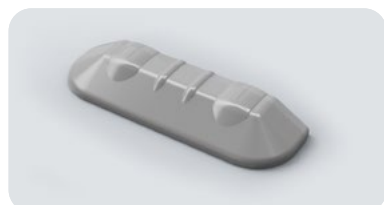

**ASPT 200**




Packing **10 pz / box**  
 Colour **B D**

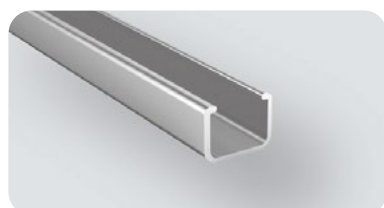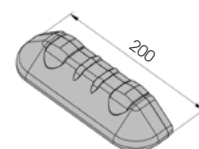

**ASA**

Material **aluminium**  
 Length **4.000 mm**  
 Packing **8 pz / bundle**

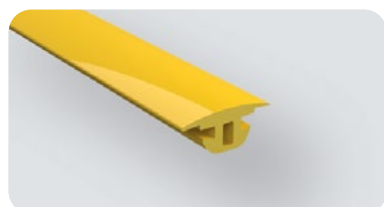

**ASCO**



Packing **2 pz / box**  
 L = **32.000 mm**  
 Colour **A B M D E**

