
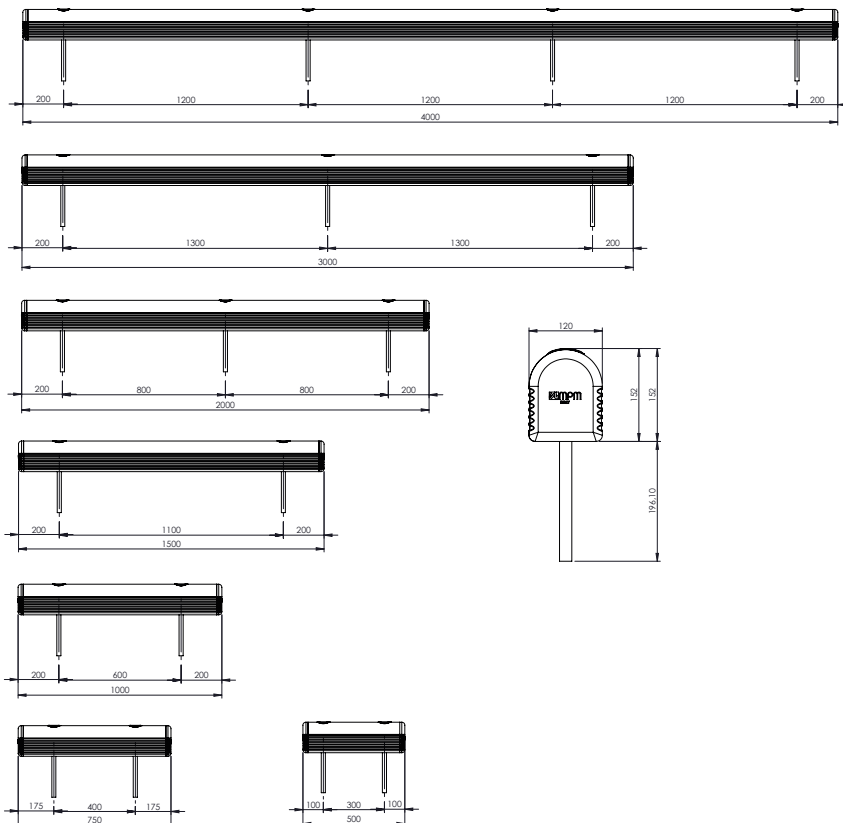


TRUCK LINE

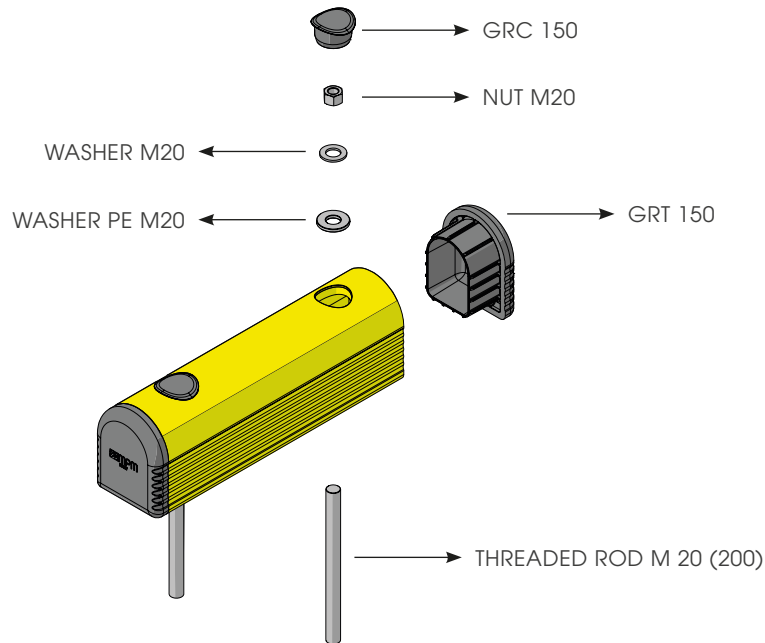

TRUCK LINE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




WARNING

The distance of installation depends on speed and weight of vehicle




CHEMICAL ANCHOR


Ø24 mm

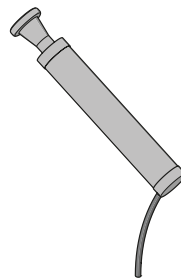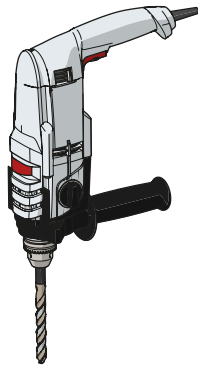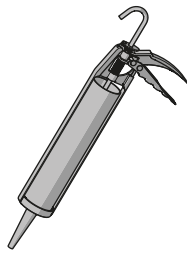

30




1

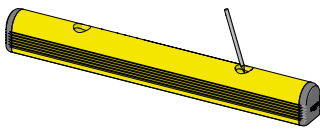


2




3

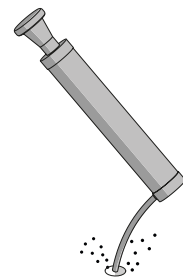


4

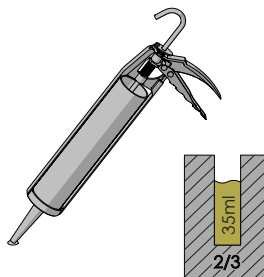


5

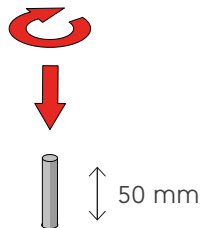


6

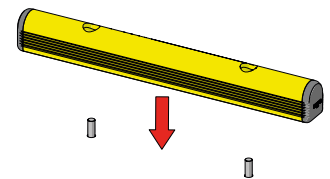

7

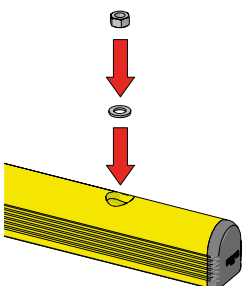

8

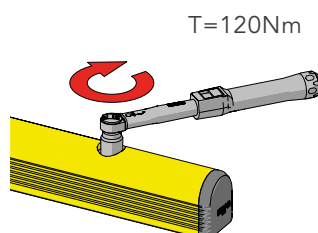

9

